

SR20ve Relocation Blocks Part #100001 & 100002

WARNING! Please read the whole guide before installing this part.

Legals:

TAARKS relocation blocks have been designed and are intended for off-road use only. The installation of this part on a vehicle intended for use on public roads may violate laws and regulations in your country/state. Additionally, this part is sold with a LIMITED warranty that only covers defects in manufacturing. This warranty does not cover any damage incurred by using this part. The installation of this part may also void any vehicle warranties. Refer to a performance specialist for proper installation.

After opening the packaging please check to see if any parts are missing or damaged. If something is missing or damaged please contact us immediately. Do not install the product.

Do not modify this part in any way. Modifying the part may result in failure of the part and voids all possible warranties.


Installation Guide

Remove the solenoids from the read of the head by removing the 4 bolts and 2 nuts.



Clean any excess gasket off both the solenoids and the head surfaces.



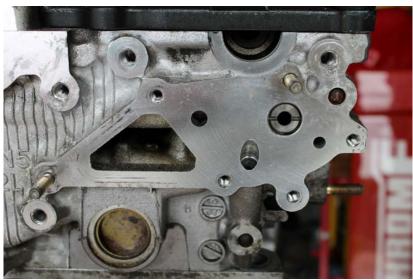

Remove the 2 studs from the head, use the double nut trick.



Install o-rings onto the fittings. Apply a small amount of engine oil to the o-rings before install into the blocks.



Install fittings into the blocks, use a soft jaw shifter to prevent scratches. Do not over tighten.






Install o-rings into the blocks. Use a small amount of oil to help keep them in place.





Using the supplied stainless bolts and washers attach the blocks to the solenoids and head.

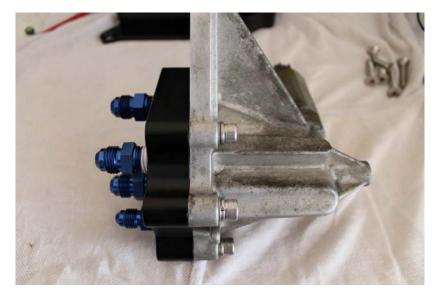



And that's it... You're all done. Enjoy & and thank you for supporting TAARKS.