



## SR20ve Single Solenoid Block Part #100005 & 100011

**WARNING!** Please read the whole guide before installing this part.

### **Legals:**


TAARKS single solenoid blocks have been designed and are intended for off-road use only. The installation of this part on a vehicle intended for use on public roads may violate laws and regulations in your country/state. Additionally, this part is sold with a LIMITED warranty that only covers defects in manufacturing. This warranty does not cover any damage incurred by using this part. The installation of this part may also void any vehicle warranties. Refer to a performance specialist for proper installation.

After opening the packaging please check to see if any parts are missing or damaged. If something is missing or damaged please contact us immediately. Do not install the product.


Do not modify this part in any way. Modifying the part may result in failure of the part and voids all possible warranties.

### **Installation Guide**

Remove the solenoids from the rear of the head by removing the 4 bolts and 2 nuts.

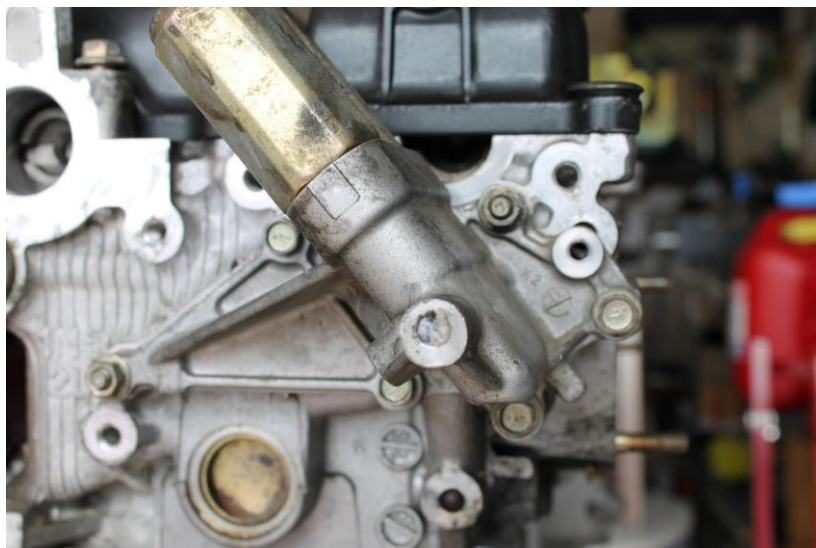

Clean any excess gasket off the head surface.

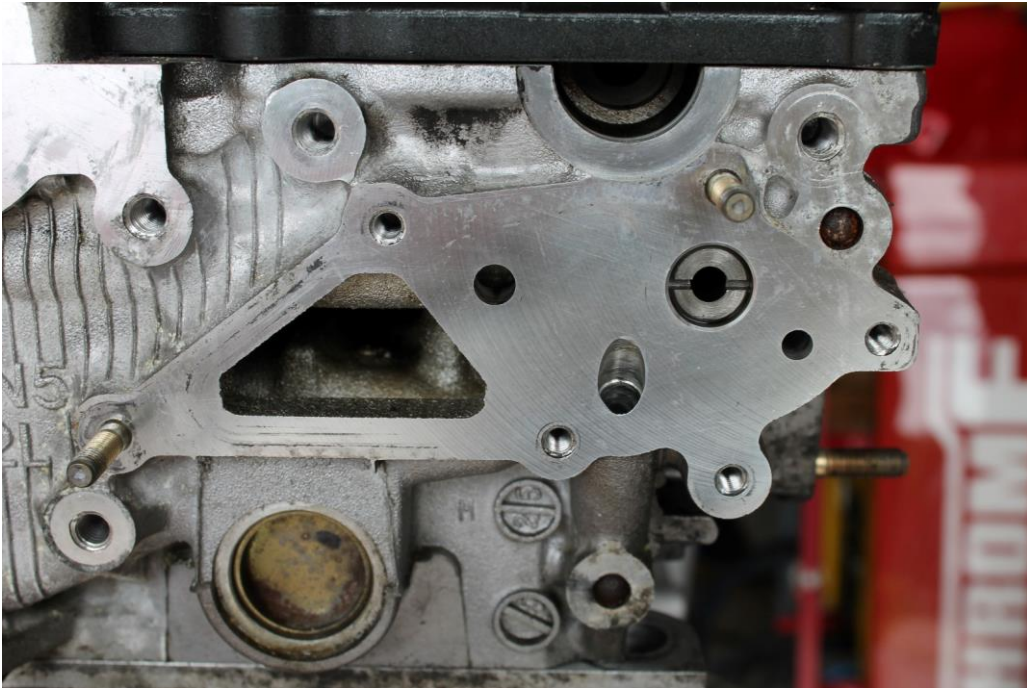

Remove the 2 studs from the head, use the double nut trick.



Lubricated the solenoid and it's o-ring with some engine oil and install into the oil block.



Install the o-ring onto the supplied AN6 ORB fitting. Lubricate the o-ring with some engine oil.




Install the fitting into the oil block. Do not use thread sealant.



Install the o-rings into the back side of the solenoid block. Apply a small amount of engine oil to the o-rings once installed.



Using the supplied M6 bolts, washers and spring washers install the solenoid block onto the head.

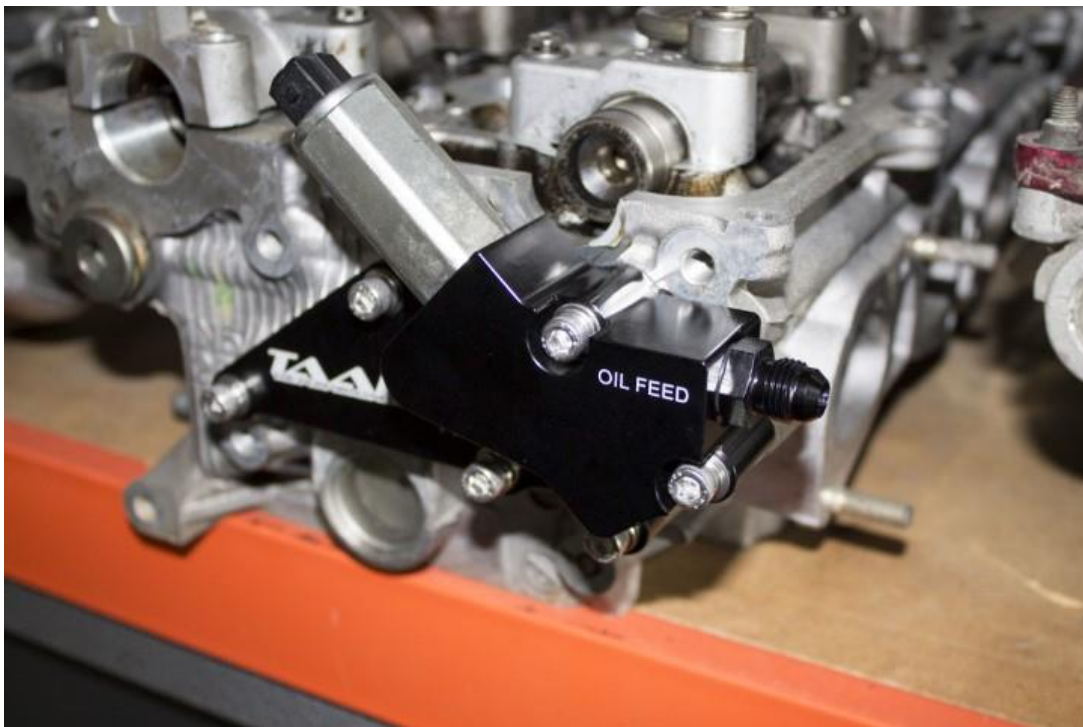

And that's it... You're all done. Enjoy & and thank you for supporting TAARKS.