

TAARKS

THE PERFORMANCE SPECIALISTS

Bosch 68mm Throttle Body to 2JZ-GTE VVTi Adapter Part #900020

WARNING! Please read the whole guide before installing this part.

Legals:


TAARKS throttle body adapter has been designed and is intended for off-road use only. The installation of this part on a vehicle intended for use on public roads may violate laws and regulations in your country/state. Additionally, this part is sold with a LIMITED warranty that only covers defects in manufacturing. This warranty does not cover any damage incurred by using this part. The installation of this part may also void any vehicle warranties. Refer to a performance specialist for proper installation.

After opening the packaging please check to see if any parts are missing or damaged. If something is missing or damaged please contact us immediately. Do not install the product.

Do not modify this part in any way. Modifying the part may result in failure of the part and voids all possible warranties.

Installation Guide

Remove the existing throttle body from the intake manifold.

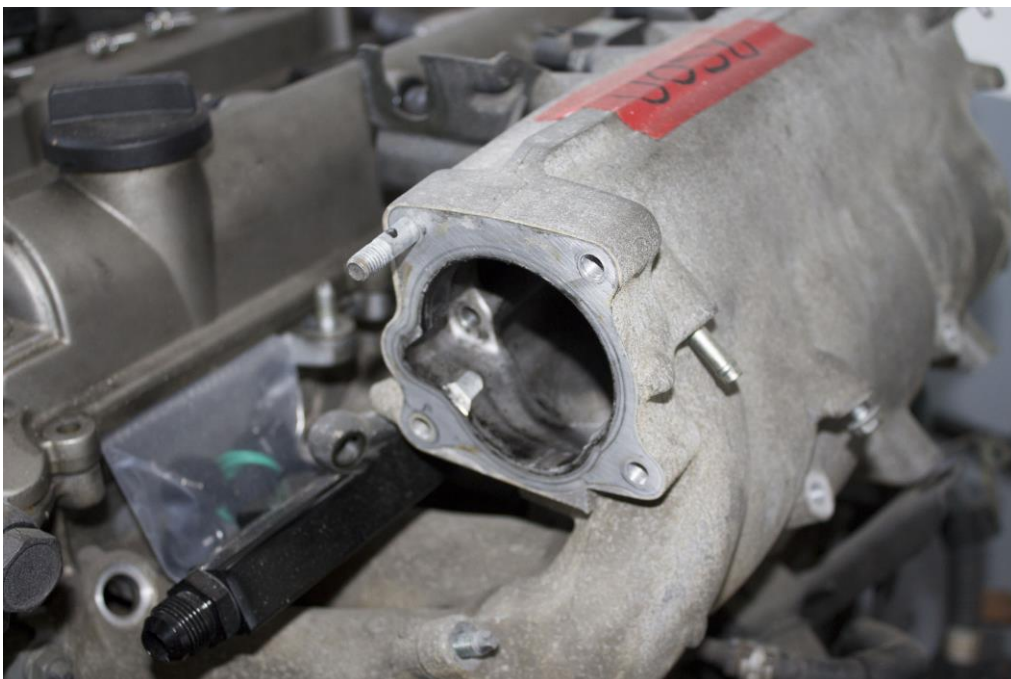

Remove the 2 studs from the intake manifold.



Next it's time to get the adapter ready. Install the 2 viton o-rings into the groove on the front and back of the adapter as shown below.



Install the adapter onto the intake manifold using the supplied M8 bolts and spring washers.



Next install your 68mm bosch throttle body onto the adapter.



And that's it... You're all done. Enjoy & thank you for supporting TAARKS.