

TAARKS

THE PERFORMANCE SPECIALISTS

RB to R35 GTR Coil Conversion Kit

WARNING! Please read the whole guide before installing this part.

Legals:

TAARKS coil conversion kits have been designed and are intended for off-road use only. The installation of this part on a vehicle intended for use on public roads may violate laws and regulations in your country/state. Additionally, this part is sold with a LIMITED warranty that only covers defects in manufacturing. This warranty does not cover any damage incurred by using this part. The installation of this part may also void any vehicle warranties. Refer to a performance specialist for proper installation.

After opening the packaging please check to see if any parts are missing or damaged. If something is missing or damaged please contact us immediately. Do not install the product.


Do not modify this part in any way. Modifying the part may result in failure of the part and voids all possible warranties.

Installation Guide

Remove the coil pack cover and existing coils, leads and wiring loom.




Install the coil bracket using the supplied M8x35mm counter sunk screws.

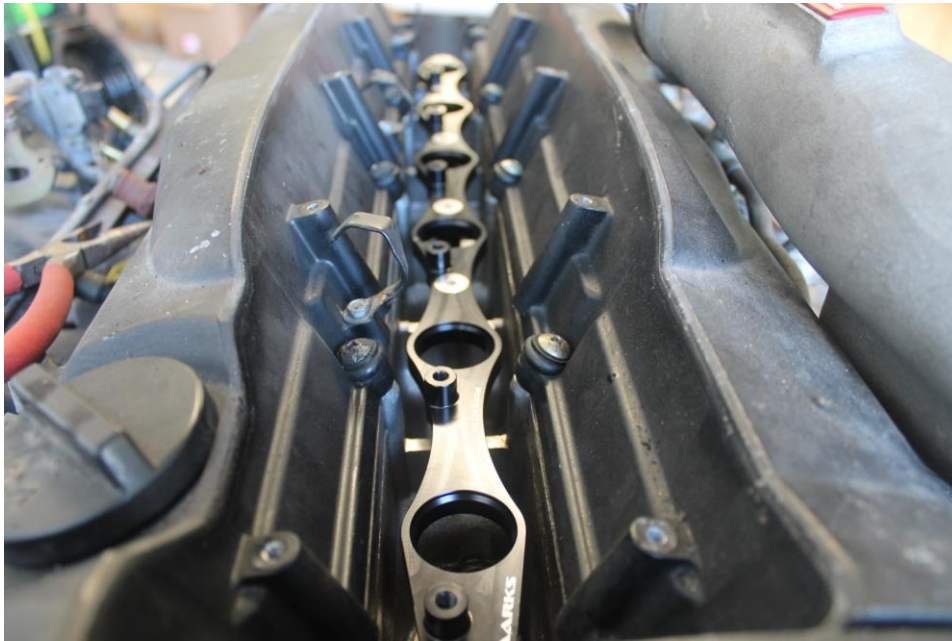


Now it's time to install the coils. The coils have already been modified with new boots and springs ready to go. The following pictures and guide are from the RB26 motor, the steps might be different for your engine. On each of the coils use a small amount of the supplied dielectric grease on the inside of the coil boot where the spark plug enters, this helps the boot slide on and off the spark plug easier.

Install the coils 1 by 1 using the provided M6x25mm cap screws and spring washers. Use a 5mm allen key to tighten. Connect the wiring harness to the coils before installing them. Apply a small amount of non-conductive lubricant to the inside of the blue silicone boots of the coils, silicone spray works best here. This helps release the coils from the spark plugs during servicing etc. (see the end of this guide for tips on removing the coils)

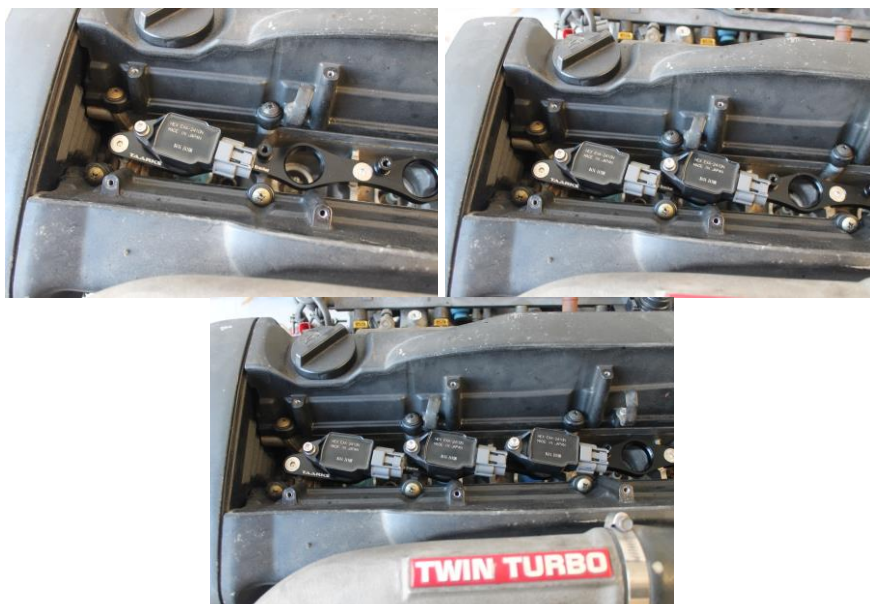

Continue this process until all 6 coils have been installed.

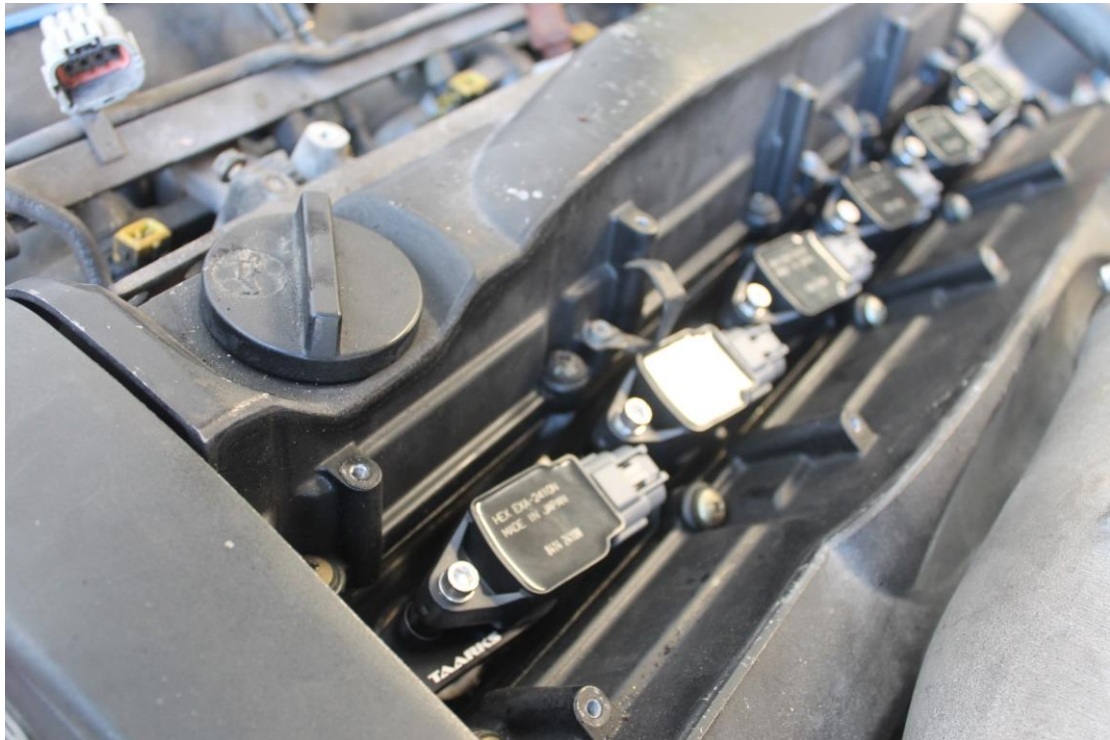

Note: It is recommended to run Resistor type spark plugs with these coils, running non resistor plugs can damage the coils.

A wiring diagram and recommended dwell times are listed on the next page.


And that's it... You're all done. Enjoy & thank you for supporting TAARKS.

****Coil pack removal.** Providing a lubricant was used on the boot using install removal of the coils is quite simple. Just remove the wiring harness and mounting bolt. At this point you will need to gently rotate the coil back and forth while lifting the coil. The twisting motion helps release the boot from the bracket. If for some reason the boot separates from the coil be sure to locate the small resistor that will fall out, this will need to be put back in when the boot goes back on. If the boot gets stuck and separated from the coil a pair of pointy nose pliers can be used to free the boot.

Wiring guide:

It is not recommended to use the standard wiring loom as the GTR coils will draw more current than the factory coils. We recommend constructing a custom wiring loom using the provided connectors. Please ensure the correct gauge wire is used to support the current draw of the coils.

The OEM igniter will need to be removed and the coils wired direct to the ignition outputs of an aftermarket ECU. Please refer to an auto electrician to correctly wire the coils.

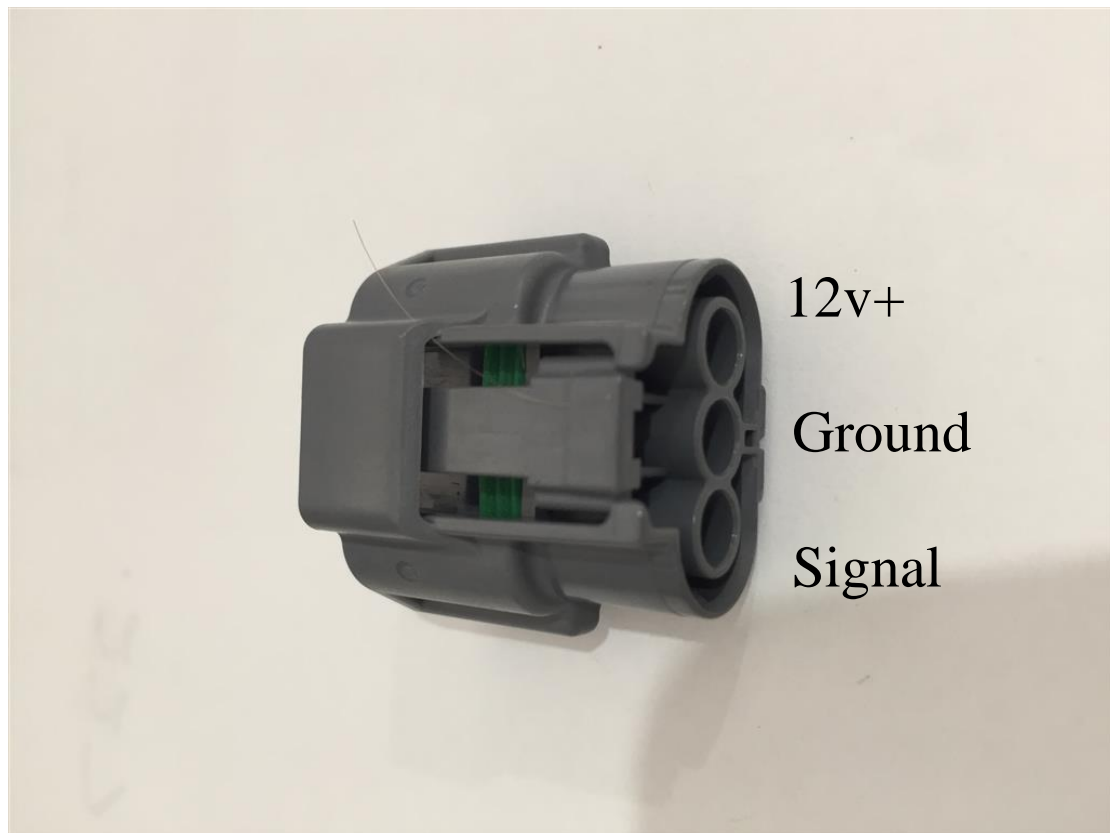

Recommended dwell settings:

5.0ms @ 8v
4.8ms @ 9v
4.7ms @ 10v
4.6ms @ 11v
4.4ms @ 12v
4.2ms @ 13v
4.1ms @ 14v
4.0ms @ 15v
3.8ms @ 16v